




## Pup-Drain™ Installation Instructions & Details

### General Guidelines:

1. Install over smooth clean surface. Fill any low areas in asphalt or concrete with leveling agent.
2. It is recommended that the drain is installed during the warmest portion of the day, so that it is at or close to its maximum thermal expansion when installed. Unrolling the rolls and letting them relax prior to installation will help Pup-Drain™ lay flatter during installation.
3. Joining sections of Pup-Drain can done using Self Adhering Rubberized Asphalt Flashing or directly nailed into asphalt.

### PLEASE NOTE:

- Be sure to have the flange facing the center of the field and the non-flanged edge to be nailed to the header/nailer.

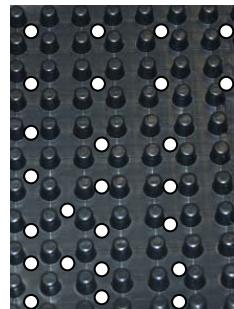


Perforated



Solid



## Pup-Drain™ Installation Instructions & Details

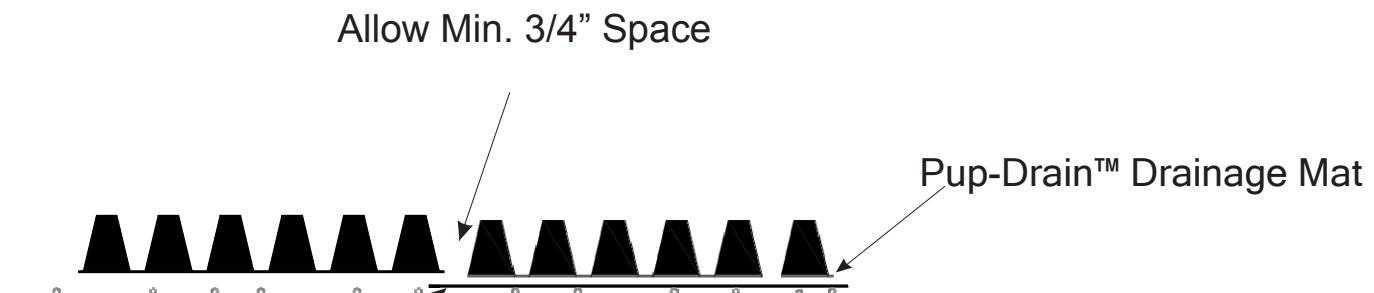

1      OVERLAP DETAIL  
N.T.S.

Top View

